



LOCALIZED SHUTDOWN SYSTEMS

FK-5-1-12

MARE-FK SERIES

Suitable on class fires



They are systems made and designed to be installed on board of pleasure boats, length no more than 24 meters, for the purpose of protecting the engine compartments. The system must be installed internally to the engine compartment with specific support supplied. The valve equipped with a thermoexpanding bulb allows the activation of device when the set temperature is reached (standard bulb at 93°C). The valve is also equipped with a pressure switch for constant signalling of the pressure inside the device. On the valve is possible the installation of pyrotechnic cartridge for a remote activation.

**Easy
version**



Manual actuator



Pyrotechnic cartridge



or

**OPTIONAL
ACCESSORIES**

**INCLUDED
ACCESSORIES**

Pressure switch



Bracket



REPRODUCTION IS PROHIBITED

File name	Type of document	Fire Extinguisher Model	Date	Rele.	Check	Rev.	Pag.
mare FK easy series	user manual	localized shutdown	17/09/2025	S.R.		2	1/4

TECHNICAL SPECIFICATIONS

CYLINDER	In high-strength alloy steel, external powder painting Red Ral 3000
EXTINGUISHING AGENT	Clean Agent FK-5-1-12
PROPELLANT	Nitrogen (N ₂)
VALVE	M. 30x1.5, with bulb in standard equipment, supplied with pressure switch set at 11 bar
USE	A B fire rating (solid materials, flammable liquids)
ACTIVATION	Automatic when bulb temperature is reached; On request (see optional): - with manual actuator with handle, - with pyrotechnic cartridge for electric activation.
*Note: the valve allow the installation of only one of two optional activation, is not possible to install both at the same time	
BULB TEMPERATURE ACTIVATION	93°C
SYSTEM TEMPERATURE RANGE	-20°C/+60°C
SYSTEM PRESSURE	15 bar at 20°C
BRACKET	Wall-mounted in standard equipment, iron painted

AVAILABLE MODELS

System Code	Max covered Volume (m ³)	Cylinder Volume (L)	Nominal charge (Kg)	Cylinder diameter (mm)	Max dimensions L x H (mm)	* Weight (Kg)	Label Code
11559-015	1,5	1,2	0,80	85	115 x 330	~ 2,00	2067-015
11559-030	3,0	1,2	1,60	85	115 x 330	~ 2,80	2067-030
11559-050	5,0	2,45	2,70	110	130 x 380	~ 4,65	2067-050
11559-075	7,5	3,90	4,00	130	140 x 415	~ 6,70	2067-075
11559-085	8,5	3,90	4,50	130	140 x 415	~ 7,20	2067-085
11559-100	10,0	3,90	5,30	130	140 x 415	~ 8,00	2067-100
11559-125	12,5	7,50	6,60	160	180 x 510	~ 10,65	2067-125
11559-150	15,0	7,50	7,90	160	180 x 510	~ 11,95	2067-150
11559-180	18,0	7,50	9,50	160	180 x 510	~ 13,55	2067-180
11559-200	20,0	10,70	10,50	170	190 x 600	~ 15,85	2067-200

*Weight: pressure switch and bracket included

TECHNICAL SPECIFICATIONS FOR OPTIONAL PARTS

Code 1890-35 Manual actuator kit for remote activation, including:
 - stainless steel cable 6 m, plastic coated, with brass terminals.
 With special self-tapping terminals that allow to cut cable at right measure and then install into terminals;
 - cable storage box, ABS white.



Code 2166-1
 Pyrotechnic cartridge for remote electric activation.


File name	Type of document	Fire Extinguisher Model	Date	Rele.	Check	Rev.	Pag.
mare FK easy series	user manual	localized shutdown	17/09/2025	S.R.		2	2/4

SPARE PARTS


N.	DESCRIPTION	CODE
1	M. 30x1.5 valve with thermosensible bulb for automatic activation 93°C	2133-1
2	Pressure gauge 1/8 NPT	0272
3	Cylinder	1,2 L 2,45 L 3,90 L 7,50 L 10,70 L
4	Bracket	1,2 L 2,45 L 3,90 L 7,50 L 10,70 L
5	Label for cylinders	(reported in the table on page 2)
6	Pressure switch M.10x1 , set at 11 bar, with protection cap	1161-2



REFERENCE FOR CYLINDERS 7,50 L AND UPPER

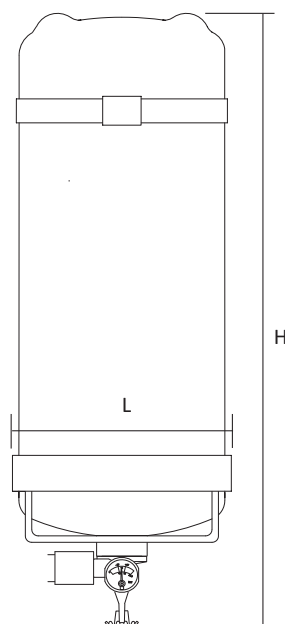

REFERENCE FOR CYLINDERS
1,2 L - 2,45 L - 3,90 L

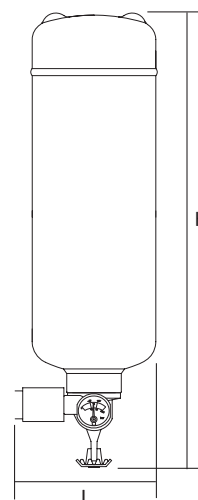

File name	Type of document	Fire Extinguisher Model	Date	Rele.	Check	Rev.	Pag.
mare FK easy series	user manual	localized shutdown	17/09/2025	S.R.		2	3/4

Warnings for use

- 1) Suitable for use on electrical fires (control panels or electrical circuits).
- 2) Ventilate the room after use.
- 3) Recharge the device after each use, even if partial

Maintenance and periodic controls

Maintenance and installation operations must be carried out by personnel specialized in the use of pressure equipment.

During maintenance it is necessary to take all precautions to prevent fires.

Maintenance must be carried out with the frequency indicated by the country in which it is installed, in Italy it must be carried out in accordance with the "safety of navigation" circular general series no. 100/2014.

Check periodically that the pressure gauge indicator is inside the green area, if indicator is in red area contact an authorized company to carry out maintenance.

Product Warranty

Any restoration operations and instrumental checks must be carried out exclusively by competent and authorized personnel, with the documentation necessary to carry out the operations to maintain product performance.

Any tampering or intervention by unauthorized personnel will void the product warranty.

File name	Type of document	Fire Extinguisher Model	Date	Rele.	Check	Rev.	Pag.
mare FK easy series	user manual	localized shutdown	17/09/2025	S.R.		2	4/4